




FIRMWARE GUIDE

You can update or change the firmware on the handset.
Please download the latest firmwares from
lonelyfilms.com/semote_firmware.zip

- » Copy the new firmwares to the Firmware folder on the SD card.
- » Power down the handset.
- » Press the upper left, the lower right blue keys and the knob at the same time.
- » Use the knob to scroll up and down in the file folder, select the file you want to use and press the knob for update.
- » Power cycle the handset to apply changes.

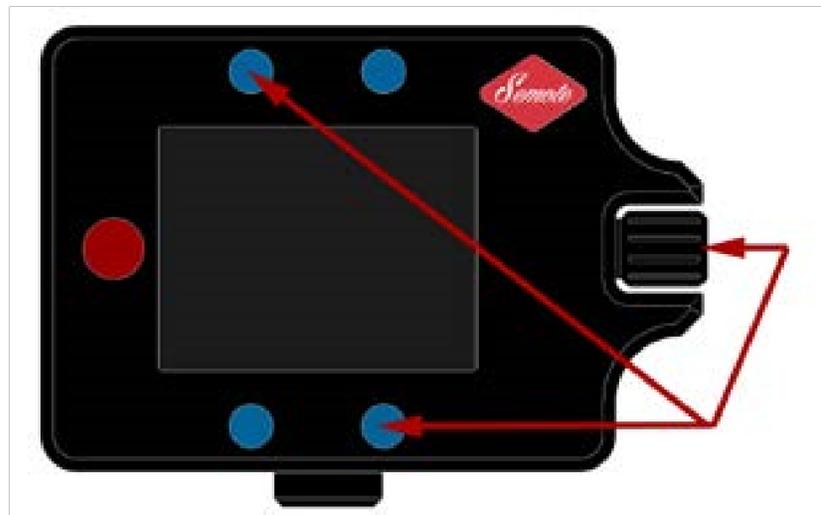

Latest firmwares are

35MM_3.07 (Arriflex 416/235/435/535)
A35_1.06 (Alexa 35)
A65_2.03 (Alexa 65)
ALEXA_5.04 (Alexa EV/PLUS/XT)
KOMODO_1.08 (RED DSMC3)
MINI_3.06 (Amira, Alexa Mini, Mini LF)
PHNTM_2.05 (Phantom high speed)
RED_2.04 (RED DSMC2)
SXT_2.04 (Alexa SXT, Alexa LF)
VENICE_2.11 (Sony Venice 1&2)